


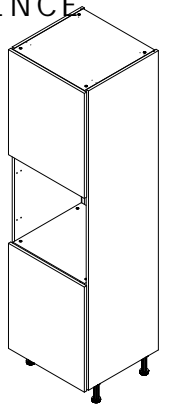
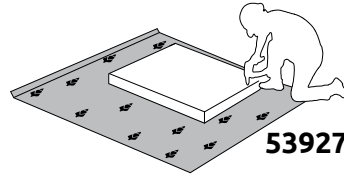






IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE
WICHTIG - SORGFÄLTIG LESEN UND AUFBEWAHREN

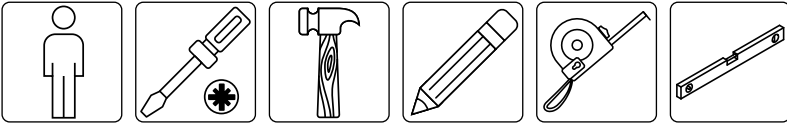




K21-60-2KR
LHW-600X2190X600

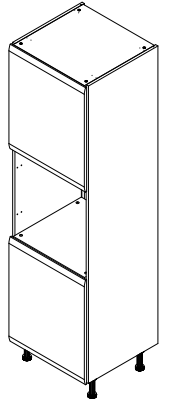


*** OPT-IC**

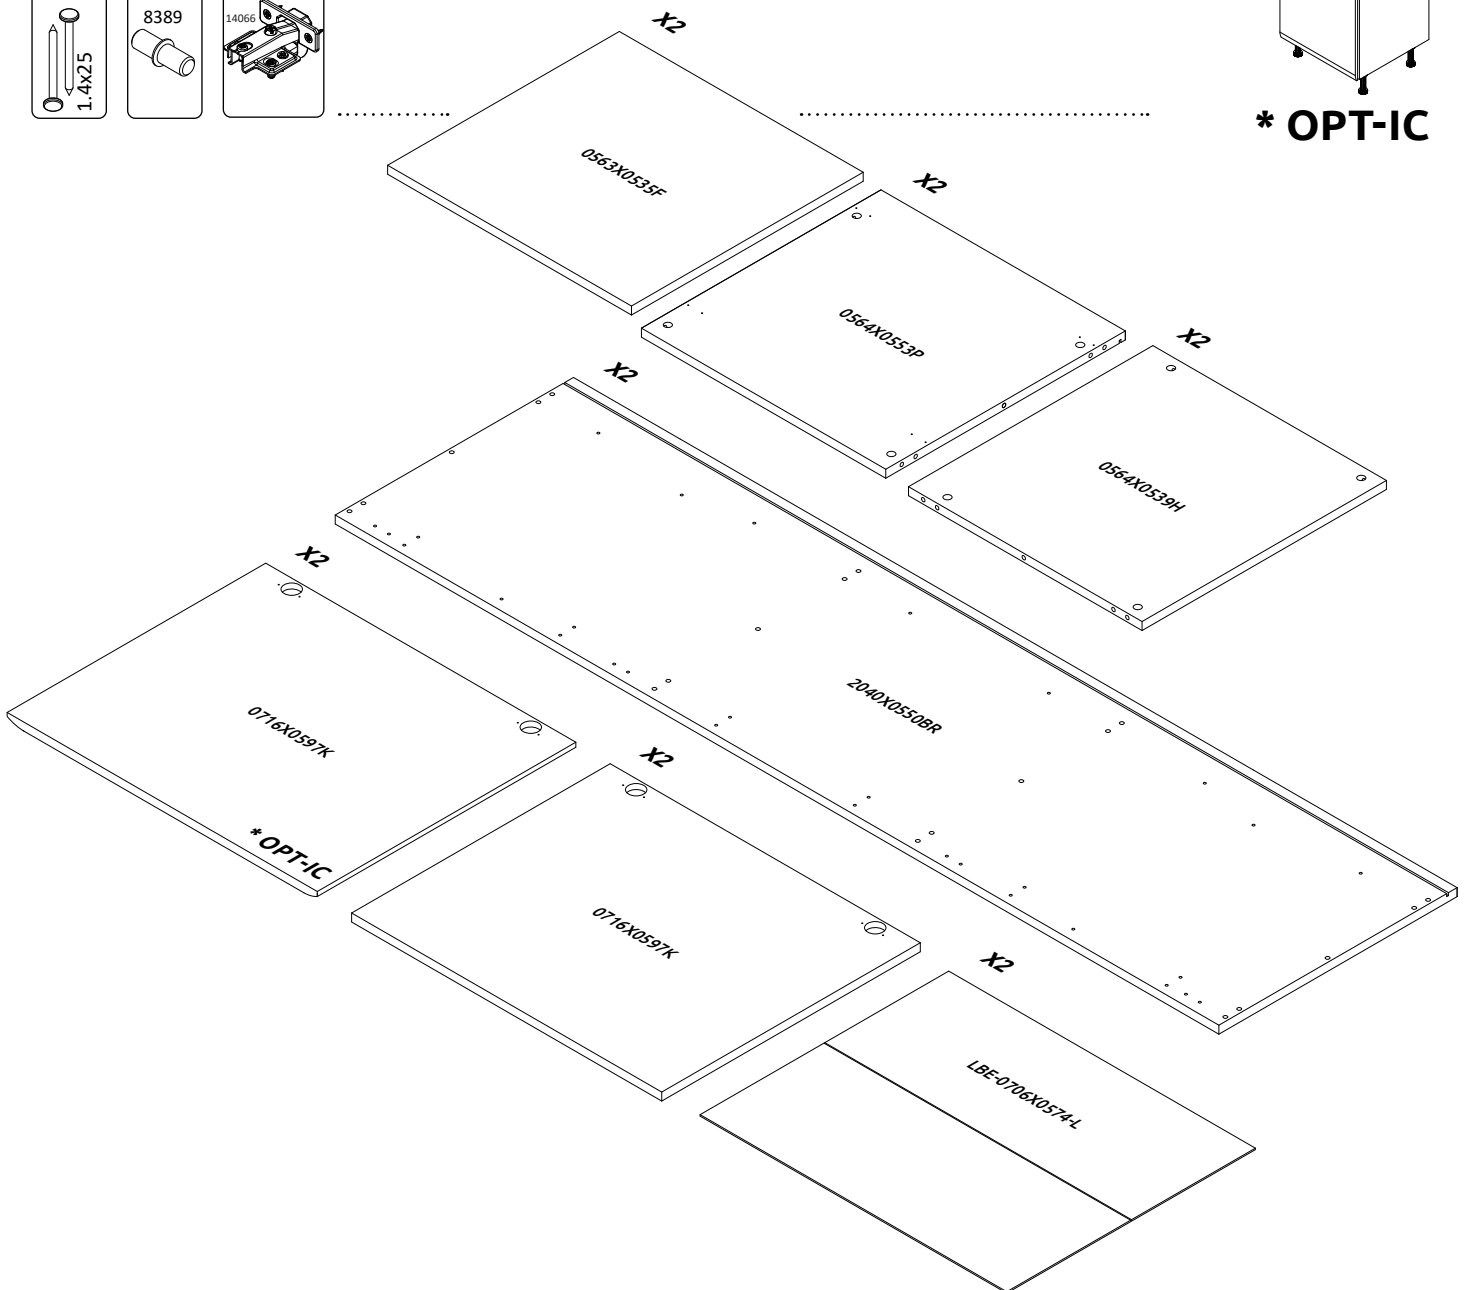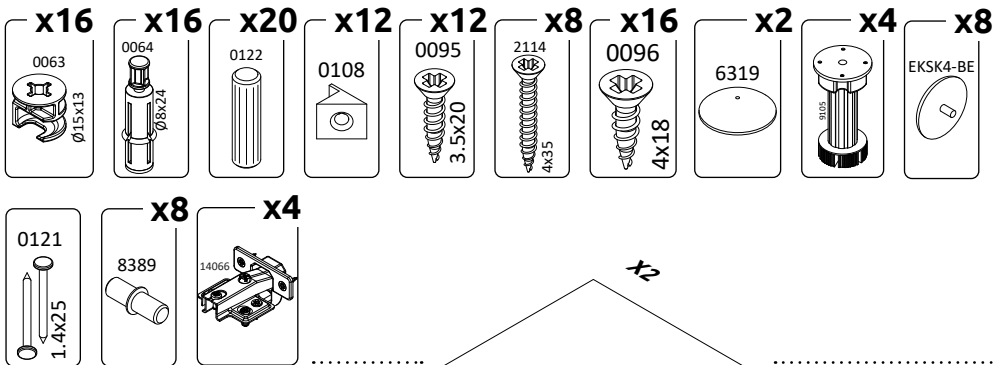


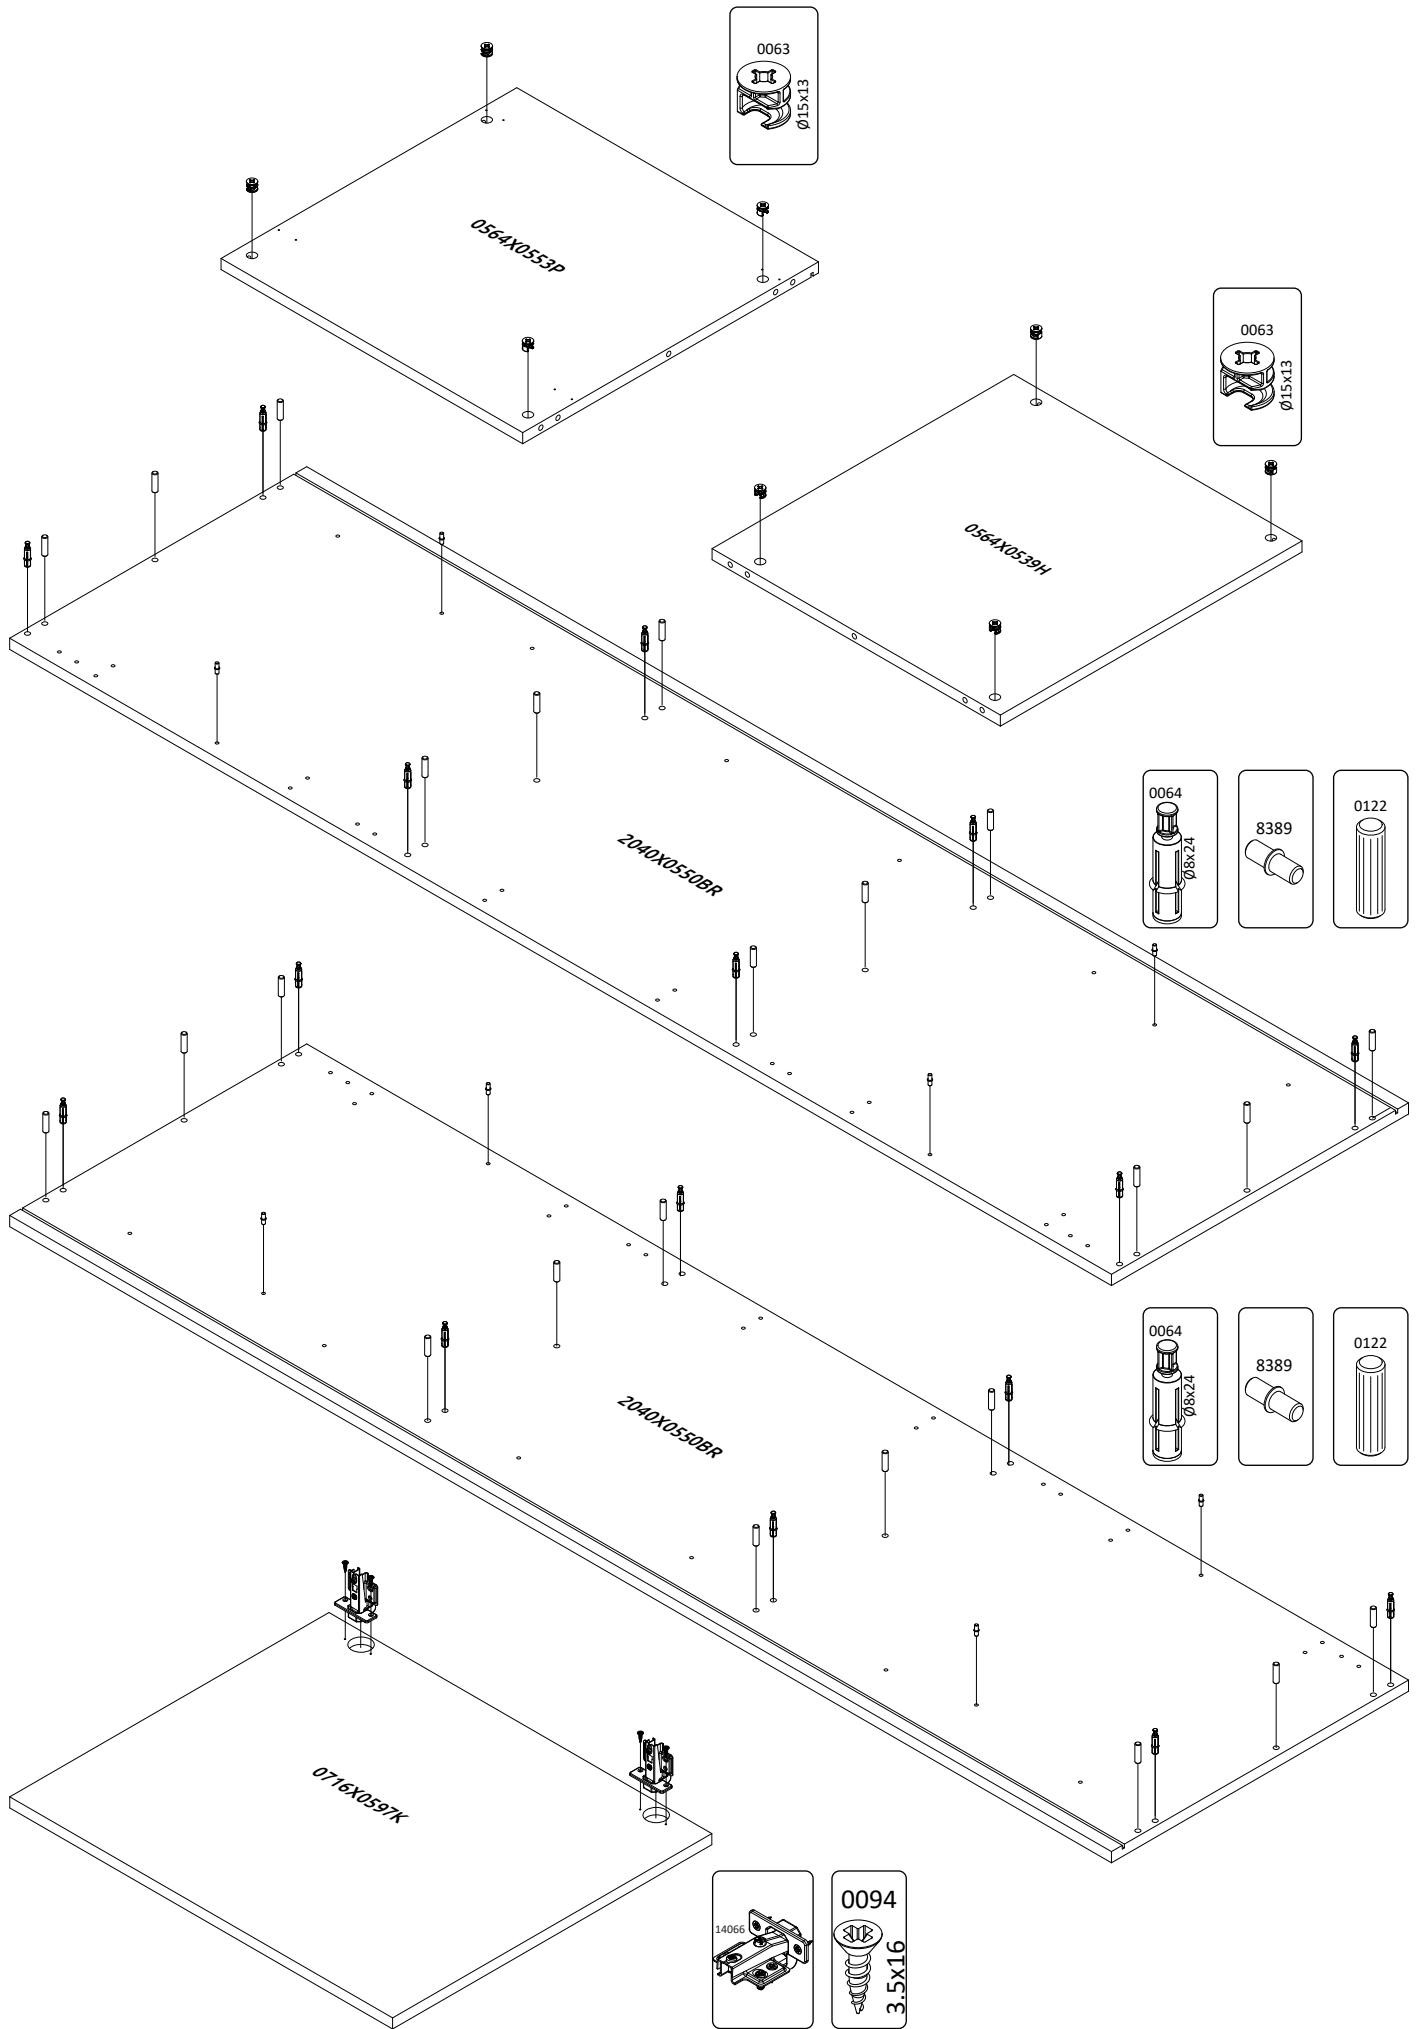

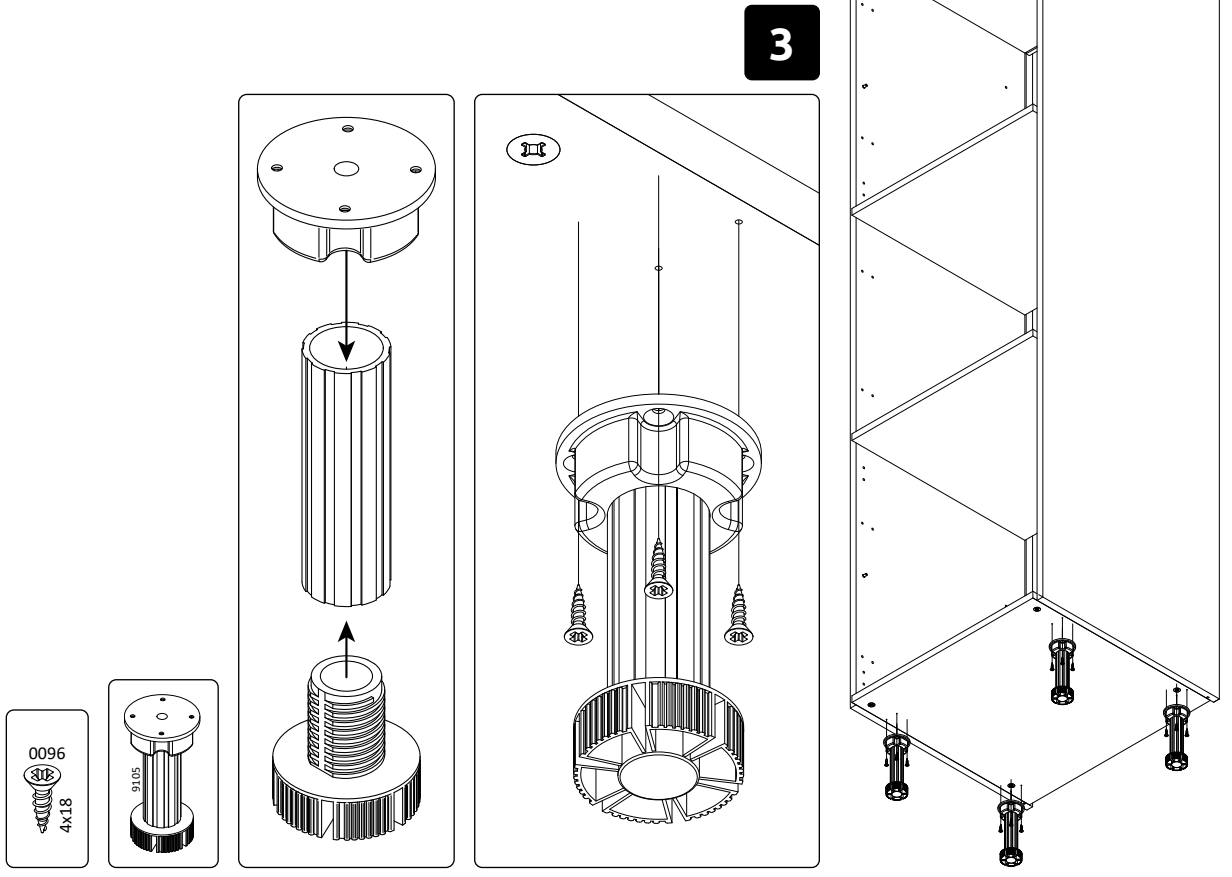
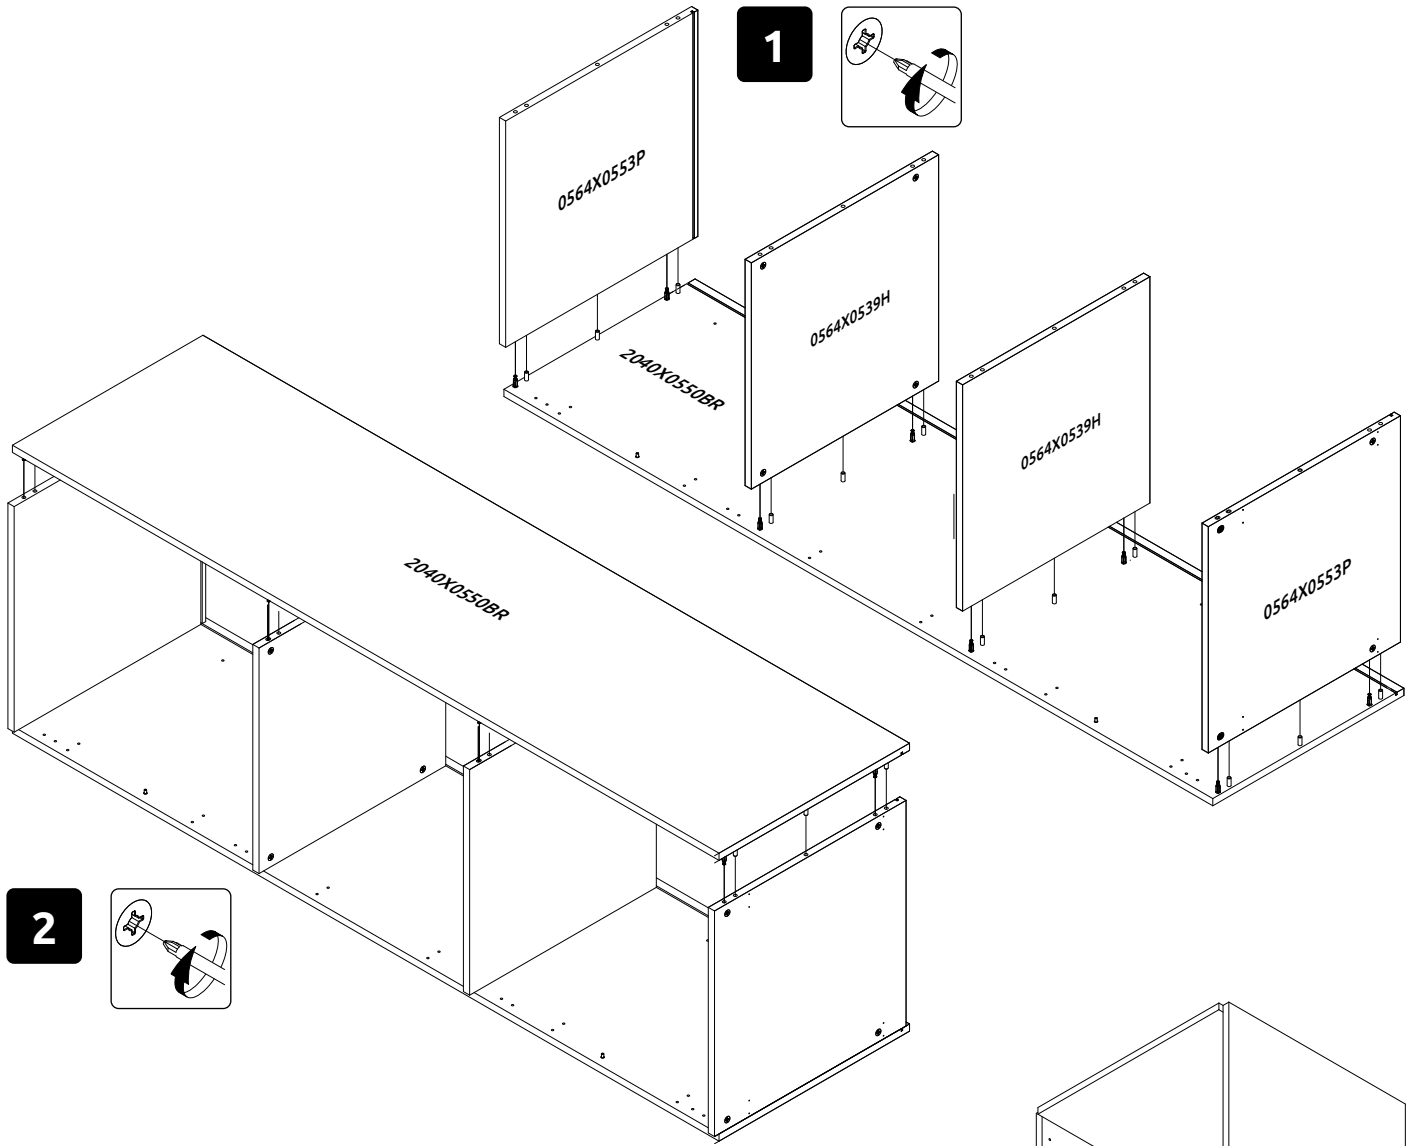


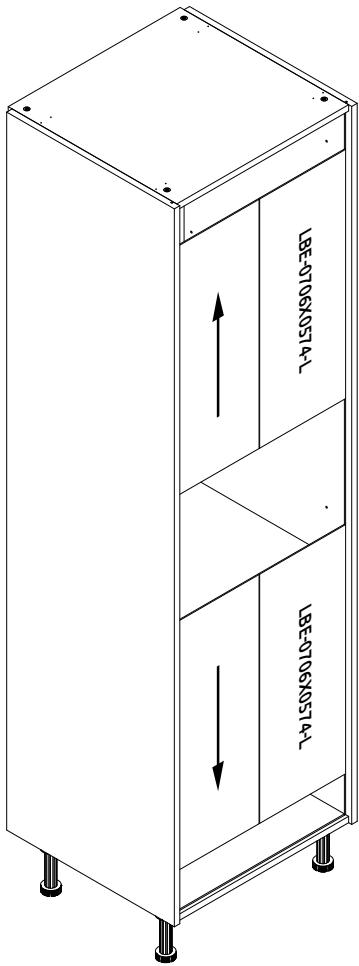



4

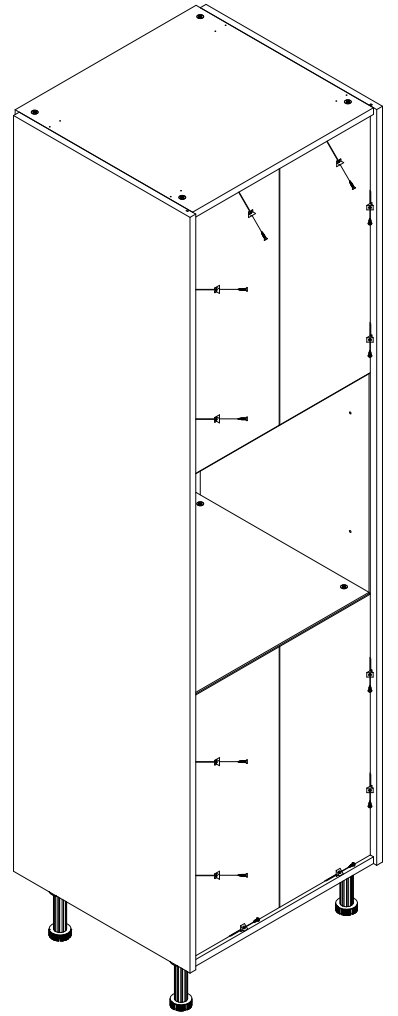


5

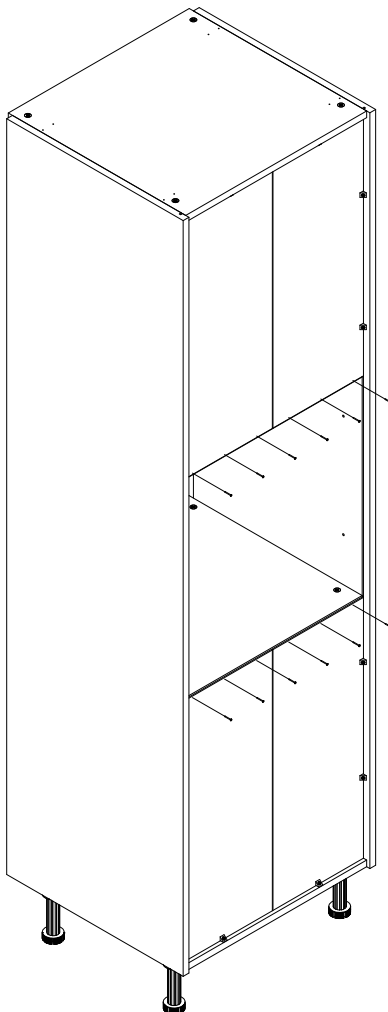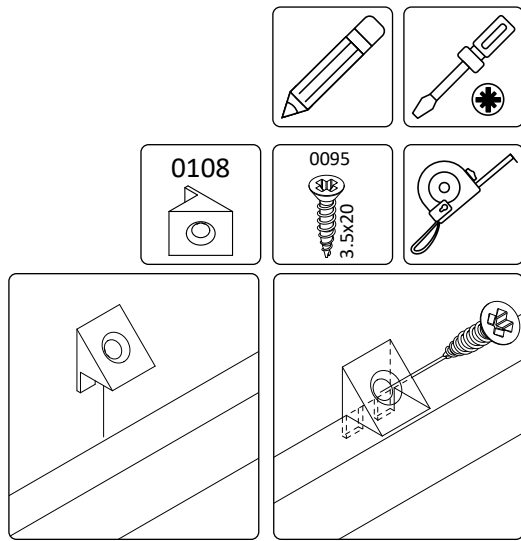


6


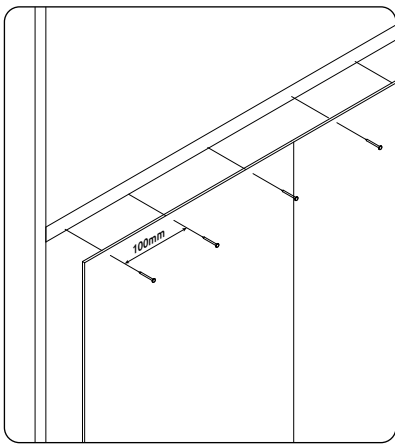


7

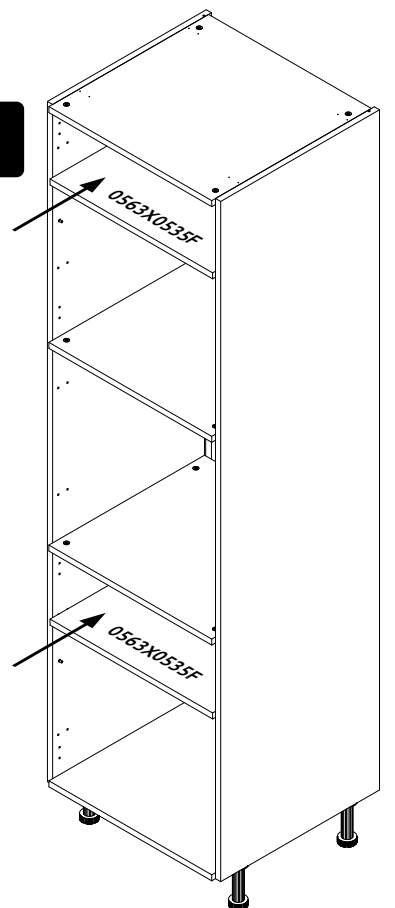


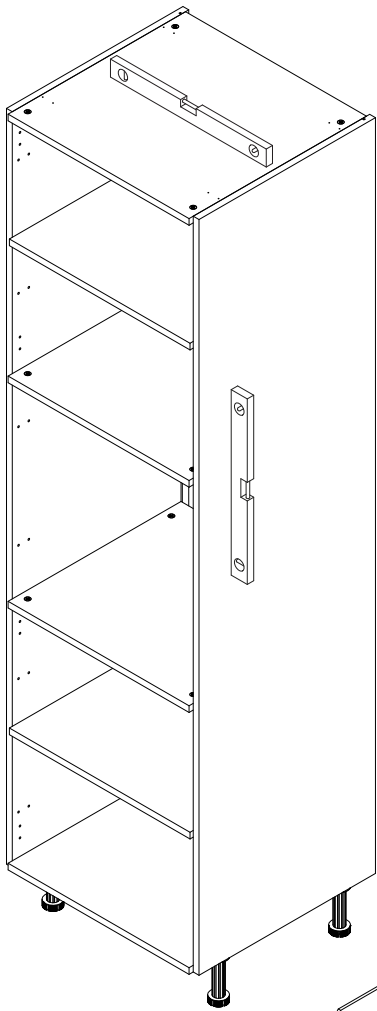


8

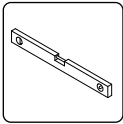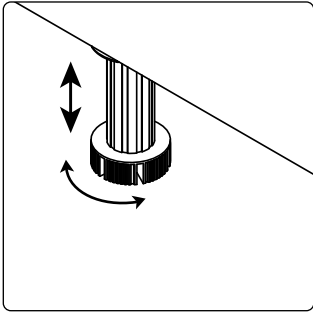


9

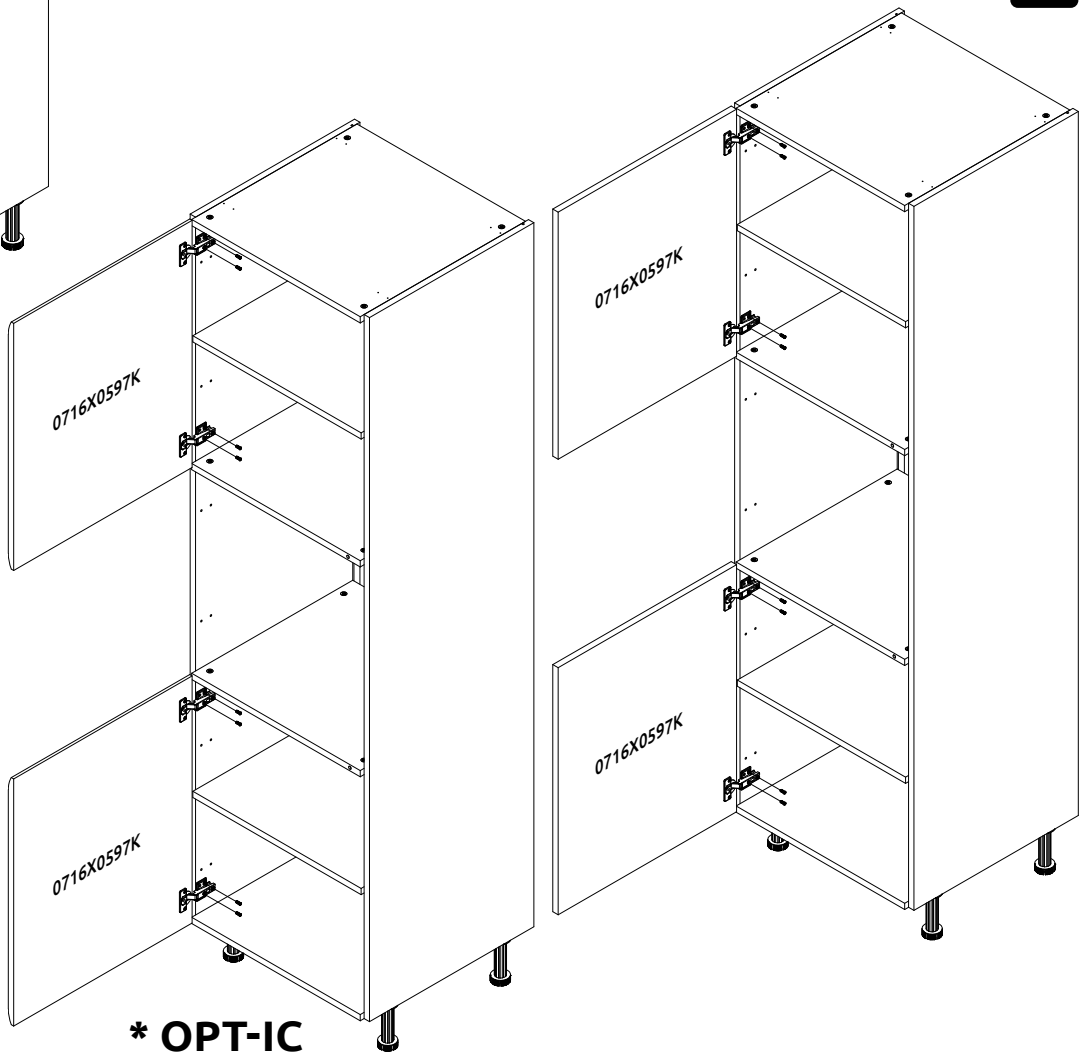


*** OPT-IC**

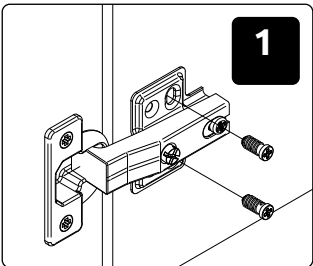


1

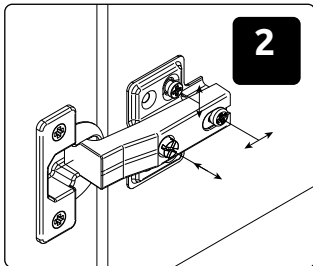

2

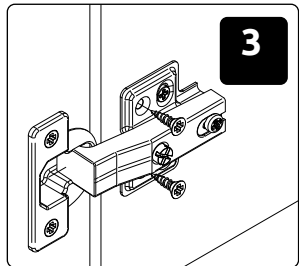


3


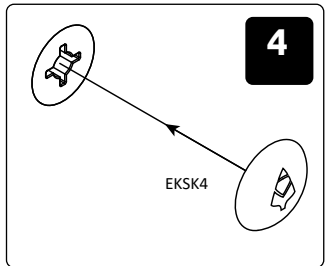


4




EKS4

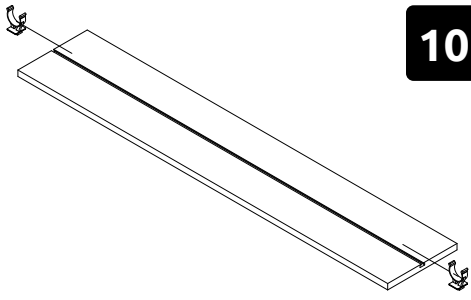

10

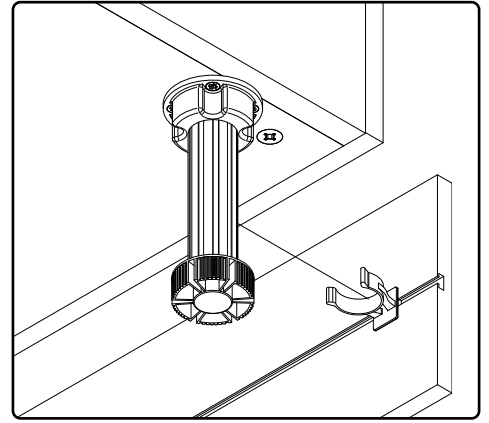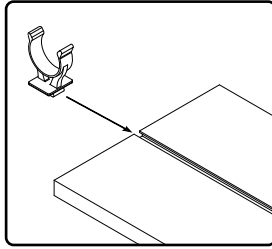

11

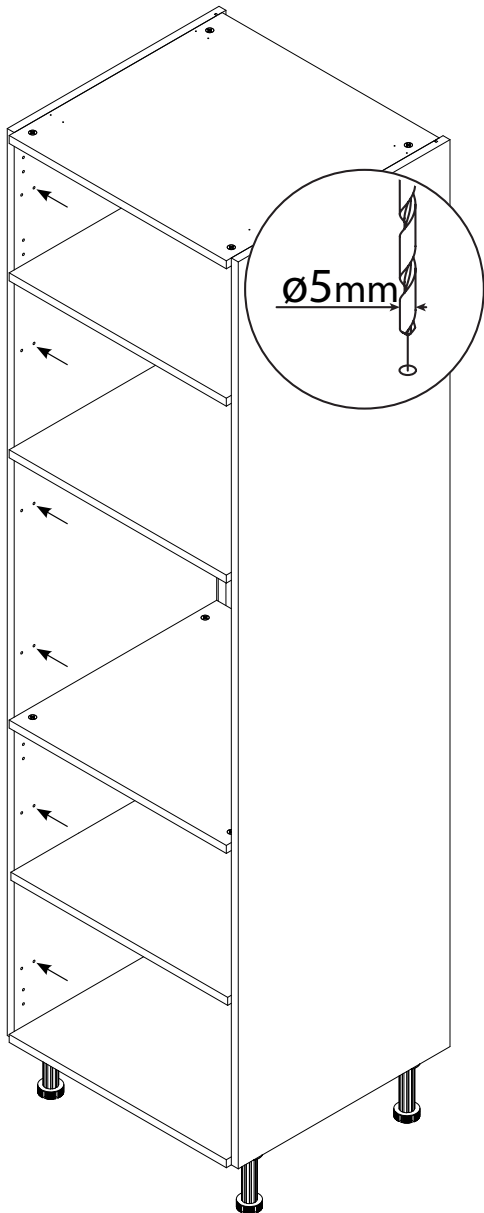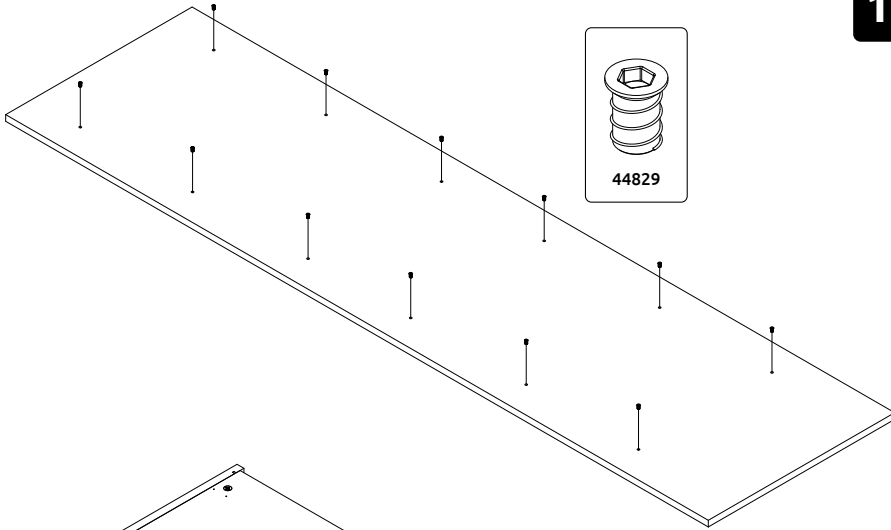

$\varnothing 5\text{mm}$

